

SPRINTER V11.11 Diagnostics List (Note:For reference only)

| Menu | | Functions | | | | |
|----------|--|------------------------------|-----------|------------|-------------|---|
| Model | System | Sys. Info. | Read code | Clear code | Data stream | |
| Sprinter | 901.6 902.6 903.6 904.6 905.6 690.6 | ME-Motor electronics | √ | √ | √ | √ |
| | | CR-common rail | √ | √ | √ | √ |
| | | KI-Instrument cluster | √ | √ | √ | √ |
| | | WSP-Immobilizer | √ | √ | √ | √ |
| | | ABW-Airbag with widow bag | √ | √ | √ | |
| | | ABS-Anti-lock braking system | √ | √ | √ | √ |
| | | AB-Airbag | √ | √ | √ | |
| | | CDI4_906 | √ | √ | √ | √ |
| | | CDI3_906 | √ | √ | √ | √ |
| | | CDID2_906 | √ | √ | √ | √ |
| | | CDI6_906 | √ | √ | √ | √ |
| | | CDI60_906 | √ | √ | √ | √ |
| | | ETC_906 | √ | √ | √ | √ |
| | | EWM_906 | √ | √ | √ | √ |
| | | ESP_906 | √ | √ | √ | √ |
| | | AAG_906 | √ | √ | √ | √ |
| | | DBE_906 | √ | √ | √ | √ |
| | | EIS_906 | √ | √ | √ | √ |
| | | LWR_906 | √ | √ | √ | √ |
| | | MRM_906 | √ | √ | √ | √ |
| | | OBF_906 | √ | √ | √ | √ |
| | | OBF2_906 | √ | √ | √ | √ |
| | | SAM_906 | √ | √ | √ | √ |

SPRINTER V11.11 Diagnostics List (Note:For reference only)

| Menu | | Functions | | | |
|---------|----------------------------------|------------|-----------|------------|-------------|
| Model | System | Sys. Info. | Read code | Clear code | Data stream |
| 906 | SRS_906 | √ | √ | √ | √ |
| | SRS-L_906 | √ | √ | √ | √ |
| | KI_906 | √ | √ | √ | √ |
| | TSG_906 | √ | √ | √ | √ |
| | KLA_906 | √ | √ | √ | √ |
| | PTC_906 | √ | √ | √ | √ |
| | ZHE_906 | √ | √ | √ | √ |
| | PTS_906 | √ | √ | √ | √ |
| | VG_906 | √ | √ | √ | √ |
| | ME_906 | √ | √ | √ | √ |
| | STL_906 | √ | √ | √ | √ |
| | STR_906 | √ | √ | √ | √ |
| | FSCU_906 | √ | √ | √ | √ |
| | RDK(As of 2011)_906 | √ | √ | √ | √ |
| | RDK(Up to 2010)_906 | √ | √ | √ | √ |
| | KE_906 | √ | √ | √ | √ |
| PSM_906 | √ | √ | √ | √ | |
| Drive | CDI-Common Rail Diesel Injection | √ | √ | √ | |
| | ECM-Engine Control module | √ | √ | √ | |
| | ACS-Automatic clutch system | √ | √ | √ | |
| | FTC-Front transmission control | √ | √ | √ | |

SPRINTER V11.11 Diagnostics List (Note:For reference only)

| Menu | | Functions | | | | |
|------------------------------------|-------------------------------|-------------------------------------|-----------|------------|-------------|---|
| Model | System | Sys. Info. | Read code | Clear code | Data stream | |
| Vaneo | | ESM-Electronic selector module | √ | √ | √ | |
| | Chassis | ESP-Electronic stability program | √ | √ | √ | √ |
| | Body | AB-Airbag | √ | √ | √ | √ |
| | | ATA - Anti-theft alarm system | √ | √ | √ | √ |
| | | DAS-Drive authorization system | √ | √ | √ | √ |
| | Information and communication | IC-Instrument cluster | √ | √ | √ | √ |
| | | PTS-Parktronic system | √ | √ | √ | |
| Vito/V-class Model designation 638 | Vito/V - Class (OBDII) | ME2 | √ | √ | √ | |
| | | V6 | √ | √ | √ | |
| | | AGN | √ | √ | √ | |
| | | CDI | √ | √ | √ | √ |
| | | KR | √ | √ | √ | √ |
| | | HZR | √ | √ | √ | √ |
| | | ABS | √ | √ | √ | |
| | | AB | √ | √ | √ | |
| | | KI | √ | √ | √ | |
| | | CDI3-4 Cylinder | √ | √ | √ | √ |
| | | CDI4-4 Cylinder | √ | √ | √ | √ |
| | | CDI4-6 Cylinder | √ | √ | √ | √ |
| | | ETC-Electronic transmission control | √ | √ | √ | √ |

SPRINTER V11.11 Diagnostics List (Note: For reference only)

| Menu | | Functions | | | |
|---|---|------------|-----------|------------|-------------|
| Model | System | Sys. Info. | Read code | Clear code | Data stream |
| VITO/VIANO (OBDII) | ME-SFI - Motor electronics | ✓ | ✓ | ✓ | ✓ |
| | ESP-Electronic stability program | ✓ | ✓ | ✓ | ✓ |
| | EIS-Electronic ignition switch | ✓ | ✓ | ✓ | ✓ |
| | UCP-Upper control panel | ✓ | ✓ | ✓ | ✓ |
| | SAM-Signal acquisition and actuation module | ✓ | ✓ | ✓ | ✓ |
| | SRS-Supplemental restraint system | ✓ | ✓ | ✓ | ✓ |
| | IC-Instrument cluster | ✓ | ✓ | ✓ | ✓ |
| | ESA passenger- Electric seat adjustment passenger | ✓ | ✓ | ✓ | ✓ |
| | ESA driver- Electric seat adjustment driver | ✓ | ✓ | ✓ | ✓ |
| | ESD [STE]-L -Left electric sliding door | ✓ | ✓ | ✓ | ✓ |
| | ESD [STE]-R -Right electric sliding door | ✓ | ✓ | ✓ | ✓ |
| SDE-H - Rear sliding/tilting sunroof unit | ✓ | ✓ | ✓ | ✓ | |

SPRINTER V11.11 Diagnostics List (Note:For reference only)

| Menu | | Functions | | | |
|-------|---|------------|-----------|------------|-------------|
| Model | System | Sys. Info. | Read code | Clear code | Data stream |
| | TPC-Tire pressure monitor | ✓ | ✓ | ✓ | ✓ |
| | OCP-Overhead control panel | ✓ | ✓ | ✓ | ✓ |
| | DCM-FL - Door control module front left | ✓ | ✓ | ✓ | ✓ |
| | DCM-FR - Door control module front right | ✓ | ✓ | ✓ | ✓ |
| | PTS-Parktronic system | ✓ | ✓ | ✓ | ✓ |
| | ENR - Electronic level control | ✓ | ✓ | ✓ | ✓ |
| | ESM-Electronic selector module | ✓ | ✓ | ✓ | ✓ |
| | AAG Trailer connection unit | ✓ | ✓ | ✓ | ✓ |
| | PTC - Electric heater control | ✓ | ✓ | ✓ | ✓ |
| | REAR AC-Rear air conditioning/Rear heater | ✓ | ✓ | ✓ | ✓ |

SPRINTER V11.11 Diagnostics List (Note:For reference only)

| Menu | | Functions | | | |
|--|---|------------|-----------|------------|-------------|
| Model | System | Sys. Info. | Read code | Clear code | Data stream |
| Vito/VIANO Model designation 639 (OBDII) | AAC-Automatic air condition/automatic temperature control/heating-ventilation | ✓ | ✓ | ✓ | ✓ |
| | CDI-Common Rail | ✓ | ✓ | ✓ | ✓ |
| | ME-SFI-Motor electronics | ✓ | ✓ | ✓ | ✓ |
| | ETC-Electronic transmission control | ✓ | ✓ | ✓ | ✓ |
| | ESP-Electronic stability program | ✓ | ✓ | ✓ | ✓ |
| | TPC-Tire pressure monitor | ✓ | ✓ | ✓ | ✓ |
| | EIS - Electronic ignition switch | ✓ | ✓ | ✓ | ✓ |
| | UCP-Upper control panel | ✓ | ✓ | ✓ | ✓ |
| | SAM - Signal acquisition and actuation module | ✓ | ✓ | ✓ | ✓ |
| | SRS - Supplemental restraint system | ✓ | ✓ | ✓ | ✓ |

SPRINTER V11.11 Diagnostics List (Note:For reference only)

| Menu | | Functions | | | |
|---------------------------|---|------------|-----------|------------|-------------|
| Model | System | Sys. Info. | Read code | Clear code | Data stream |
| VITO/VIANO (CAN BUSII) | IC - Instrument cluster | √ | √ | √ | √ |
| | COMMANDED | √ | √ | √ | √ |
| | PTS-Parktronic system | √ | √ | √ | √ |
| | DCM-FL - Door control module front left | √ | √ | √ | √ |
| | DCM-FR - Door control module front right | √ | √ | √ | √ |
| | AAC-Automatic air condition/automatic temperature control/heating-ventilation | √ | √ | √ | √ |
| | PTC - Electric heater control | √ | √ | √ | √ |
| | ENR - Electronic level control | √ | √ | √ | √ |
| | SDE-H - Rear sliding/tilting sunroof unit | √ | √ | √ | √ |
| | ESA passenger-Electric seat adjustment passenger | √ | √ | √ | √ |
| | ESA driver- Electric seat adjustment driver | √ | √ | √ | √ |
| | ESD [STE]-L -Left electric sliding door | √ | √ | √ | √ |

SPRINTER V11.11 Diagnostics List (Note:For reference only)

| Menu | | Functions | | | |
|-------|--|------------|-----------|------------|-------------|
| Model | System | Sys. Info. | Read code | Clear code | Data stream |
| | STH-Stationary heater/Heater booster | ✓ | ✓ | ✓ | ✓ |
| | PSM Parameterizable special module | ✓ | ✓ | ✓ | ✓ |
| | AAG Trailer connection unit | ✓ | ✓ | ✓ | ✓ |
| | LWR Headlamp range adjustment | ✓ | ✓ | ✓ | ✓ |
| | ESD [STE]-R -Right electric sliding door | ✓ | ✓ | ✓ | ✓ |
| | | | | | |